



ANTIDARK



Designline Tube Kit 2m + 3 Spots




5X

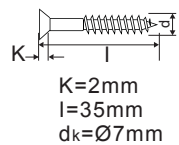


5X

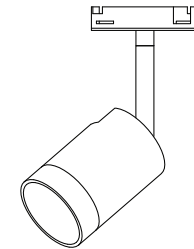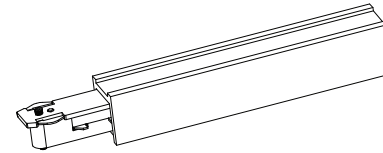


3X

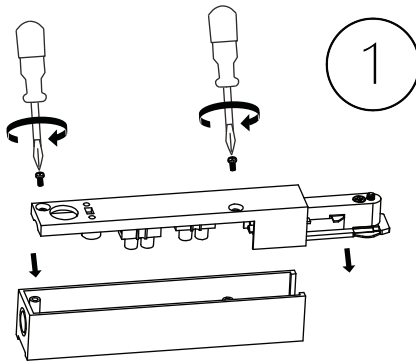


1

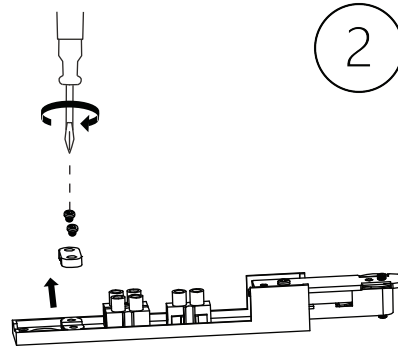


2

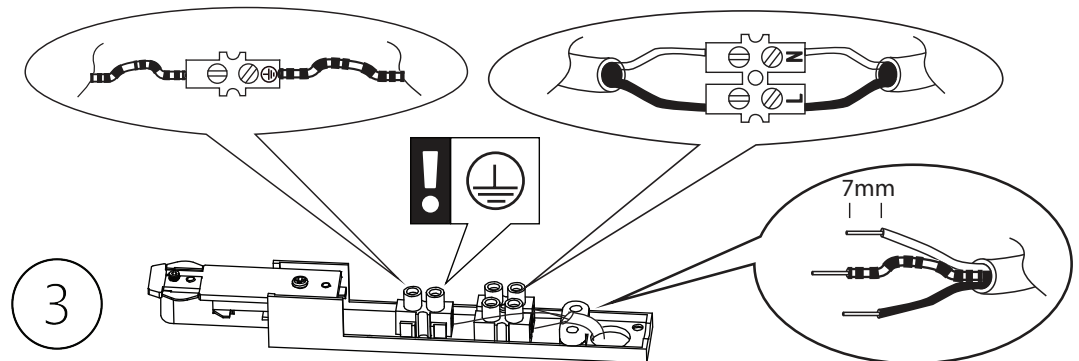


3

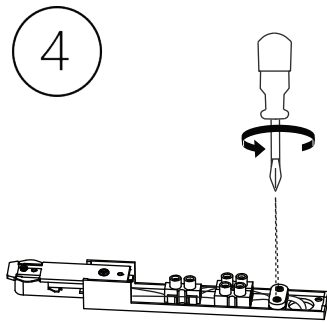



4

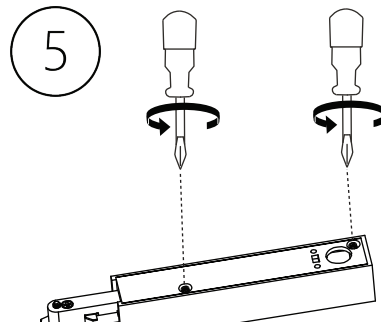

5

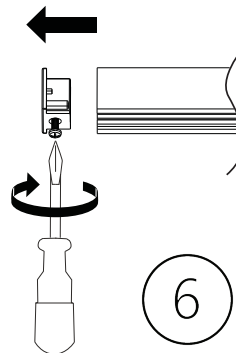


6

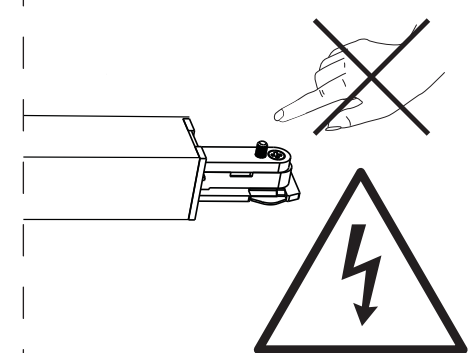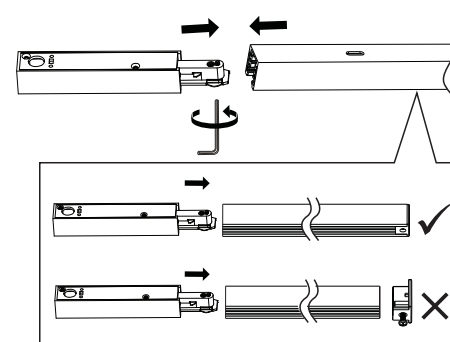


TIP: When the spot is positioned where you want it to be placed, it is a good idea to retighten the screws / Når spottet er placeret, hvor du ønsker det skal sidde, er det en god idé at efterspænde skruerne.
Find the most updated version by searching for this products at www.antidark.dk / Find den mest opdaterede version ved at søge på på dette produkt på www.antidark.dk

ANTIDARK


Designline Tube Kit 2m + 3 Spots

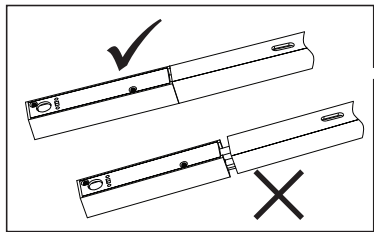

7

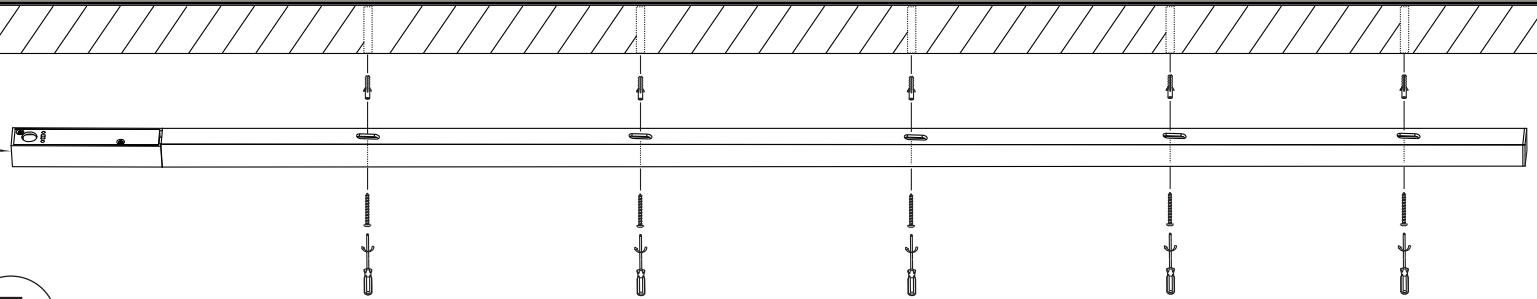


8

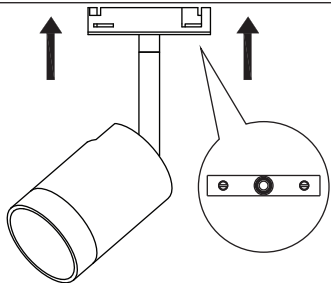

9

- 1.
- 2.
- 3.

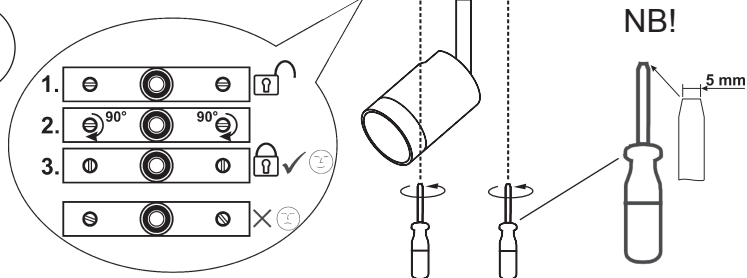

10

